

- Use the Wash Cycle knob to select available cycles on your washer. Turn the knob to select a cycle for your laundry load.
- You may select a Wash Temperature based on the type of fabric and soils being washed. Use the warmest wash water safe for the fabric. Follow garment label instructions.
- Select the most suitable soil level setting (Light, Medium, or Heavy) for your load.

| Items to wash: | Cycle: | Soil Level | Wash Times**: | Wash/Spin Speed: | Cycle Details: |
|--|-------------------|-----------------|---------------|-------------------|---|
| Cottons and linens; loads that are moderately or heavily soiled | Normal | Medium or Heavy | 8–12 | High and Low/High | You may select a wash time based on your load. |
| Heavily soiled loads | Super Wash | Heavy | 14 | High/High | The longest wash time. |
| Permanent press blends and synthetic fabrics that are lightly to moderately soiled | Casual | Light or Medium | 6–10 | High and Low/Low | You may select a wash time based on your load. Features a low-speed final spin to reduce wrinkling. |
| Lightly to moderately soiled delicate items and washable knits | Delicates | Light or Medium | 8 | Low/Low | Gently removes soils and minimizes wrinkling. |
| Heavily soiled or stained items that need pretreatment | Soak* | Heavy | 12 | High/High | Brief periods of agitation and soak followed by a 2-minute pre-wash featuring high-speed agitation. |


* You should use the amount of detergent or presoak additive recommended by the manufacturer. After the cycle ends, you may add detergent and start a new wash cycle.

** Approximate time in minutes.

IMPORTANT: Do not presoak items in your washer by lifting the lid or stopping the cycle. Failure to follow this instruction can result in property damage. If needed, presoak items in a small wash basin prior to loading the washer.


To add a garment after washer starts:

Push in the Cycle knob to stop the washer, Open the lid and add the item(s), Close the lid and pull the Cycle knob out to resume the cycle. **Do not leave the lid open unattended once the washer has started filling.** For best performance, do not interrupt washer cycle once the washer has been started.

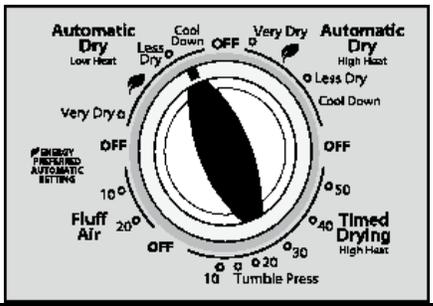

AUTOMATIC DRY – Automatic cycles give the best drying in the shortest time. They sense moisture in the load or air temperature and shut off when the load reaches the selected dryness level. Drying time varies based on fabric type, load size, and dryness setting.

Select a drying temperature based on the fabrics in your load. If you are unsure of the temperature to select for a load, select the lower setting rather than the higher setting.

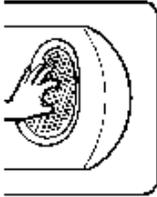

******Clean the lint screen before each load. On 24" models, it is located inside the dryer on the back wall.** Reach inside the drum and pull out the lint screen and its cover, and separate the cover and the screen by squeezing the screen and pulling on the cover at the same time. Roll lint off the screen with your fingers. Put the lint screen and its cover back together and push firmly into place****

Use the Automatic Dry cycles to provide the most energy savings and enhanced fabric care from the dryer. During Automatic Dry cycles, drying air temperature or moisture level are sensed in the load. This sensing occurs throughout the drying cycle and the dryer shuts off when the load reaches the selected dryness.

With Timed Drying, the dryer runs the amount of time set and sometimes results in shrinkage, wrinkling, and static due to over drying. **Use Timed Drying for the occasional damp load that needs a little more drying time or when using the drying rack.

| Items to dry: | Cycle: | Cycle Details: |
|--|---------------------------|--|
| Most loads, including jeans, heavy work clothes, towels | AUTOMATIC DRY (High Heat) | Automatic cycles include a cool down cycle to make the load easier to handle. |
| Medium to lightweight synthetics, permanent press, no-iron items or smaller, lighter loads, including work clothes, medium weight fabrics, sheets, casual shirts, pants, lightweight items, synthetics, delicates, athletic wear | AUTOMATIC DRY (Low Heat) | An ENERGY PREFERRED AUTOMATIC SETTING is available for optimal energy savings. |

****NOTE:** If loads do not seem as dry as you would like, select Very Dry next time you dry a similar load. If loads seem drier than you like, select Less Dry next time you dry a similar load.

| Items to dry: | Cycle: | Temperature: | Cycle Details: |
|---|---------------|--------------|--|
| Rubber, plastic, heat-sensitive fabrics | Fluff Air | No Heat | No-heat drying. |
| Any load | Tumble Press® | High | Helps remove wrinkles in dry clothing, such as those found in clothes packed in a suitcase or in items wrinkled from being left in the dryer too long. |
| Heavy, bulky, or lightweight items | Timed Drying | High | Completes drying if items are still damp. |

We are available Monday-Friday, 8AM-4:30PM to answer any questions: 800-558-2342 service@automaticleasing.com