

Instructions for New Card System – CleanPay Credit

This system accepts credit/debit cards for purchase. A Value Code can also be used for purchase if you have one. **This kiosk does not provide a receipt.**

This system dispenses Contactless Laundry Cards for use at the washer and dryer. There is no need to insert the contactless laundry card into any slot. Here are the simple instructions:

Buy A Card (this is to purchase a laundry card for use on the washers and dryers):

1. Press F3 button on the Terminal
2. Swipe your credit/debit card (or choose F3 on the Terminal for Value Code)
3. Follow the instructions on the screen **(The instructions are one of two things depending on how you want the system set up: 1. Force user to select Yes or No to continue with no receipt or 2. A self-timed message saying "THIS KIOSK DOES NOT PROVIDE A RECEIPT" appears)**
4. Your laundry card will be dispensed by the Card Dispenser

Add Value To A Card (this is to purchase value to be added to the laundry card):

1. Place your laundry card in the Card Holder
2. Swipe your credit/debit card (or choose F3 on the Terminal for Value Code)
3. Follow the instructions on the screen **(Again, the instructions are one of two things depending on how you want the system set up: 1. Force user to select Yes or No to continue with no receipt or 2. A self-timed message saying "THIS KIOSK DOES NOT PROVIDE A RECEIPT" appears)**
4. Select a preselected amount or choose F3 on the Terminal to select Other Amount
5. Follow the instructions on the screen **(This is where the credit card trans is going through (a couple seconds) and the value is written to the laundry card)**
6. "Add to Card Successful" will appear. Remove your card for use on the washers and dryers.