



Full Size Washing Machine User Guide

1

Add laundry detergent.

Use only high efficiency, or HE, detergent. Refer to packaging for proper amount based on load size. If applicable, add bleach to the dispenser.

2

Load the machine.

Place clothes loosely into the washing machine basket. Load items evenly to maintain washing machine balance.

3

Select cycle and start the machine.

Choose the appropriate cycle, soil level, and water temperature for the load. Press the START/PAUSE/UNLOCK button to start the washing machine. Please note that once you press the START/PAUSE/UNLOCK button, the machine will fill to an initial water level and then begin sensing to determine the size of the load. If the lid is closed when the machine is done sensing, the lid will lock and the machine will continue filling with water to begin operation. The lid will remain locked for the rest of the cycle unless the cycle is paused or canceled. If the lid is open when the machine is done sensing, you must close the lid and press the START/PAUSE/UNLOCK button again to continue filling and begin operation. If the cycle has not started within 10 minutes it will be canceled and the water will drain.

4

Wait for the cycle to complete.

When the cycle is finished, the green CYCLE COMPLETE indicator light will turn on. You must wait for the indicator before removing clothes.

Note, the machine will remain locked throughout the cycle, as indicated by the LID LOCKED light. The lid cannot be opened when this light is on. If you need to open the lid to add a garment during the sensing process, you must press the START/PAUSE/UNLOCK button and wait for the lid to unlock. Depending on where in the cycle you try to pause, it may take several seconds to several minutes for the lid to unlock. When the Lid Locked button blinks, the machine is paused. Once the light has turned off, the lid can be opened. Press START/PAUSE/UNLOCK to resume the cycle.

Multi-Family Laundry Solutions Since 1956

Automatic
LEASING  SERVICE





Full Size Dryer User Guide

1

Clean the lint screen.

Pull the lint screen out of its holder. Remove lint and push the lint screen firmly back into place. Once a month rinse the lint screen with warm water to prevent residue build up.



2

Load the dryer.

Place clothes loosely inside the dryer and close the door. Do not over pack the dryer. Allow space for clothes to tumble freely.

3

Select cycle and start the dryer.

Chose the appropriate cycle for your load.

Automatic Dry/Sensor Dr

This cycle provides the most energy savings and enhanced fabric care from the dryer. Air temperature and moisture level are sensed throughout the cycle and the dryer automatically shuts off when the load reaches the selected dryness. Select a dryness level by turning the knob to VERY DRY, ENERGY PREFERRED, or LESS DRY.

The ENERGY PREFERRED cycle will provide optimal energy savings. Once a dry level is set, it cannot be changed without stopping the cycle.

Timed Drying Cycle

Use this cycle for the occasional damp load that needs a little more drying time or when using the drying rack.

Set the END OF CYCLE Signal to on or off for a sound when the cycle is complete. Press and hold the PUSH TO START button to start the dryer.

Laundry Tips & Best Practices

- Avoid opening the washing machine lid during the sensing phase to prevent the cycle from starting over.
- Do not overload the washing machine. Items should move easily through the water. Overloading can cause poor cleaning and/or water overflow or leakage.
- For best results, mix large and small items in each load.
- Clean the lint screen before and after each dry cycle. A blocked screen can increase drying time.
- For proper dryer operation keep the area clear of items that could block air flow.

Automatic

LEASING  SERVICE

CALL 800.558.2342 VISIT automaticleasing.com