



LG Laundry System User Guide

1

Add laundry detergent.

Use only high efficiency, or HE, detergent. Refer to packaging for proper amount based on load size. If applicable, add liquid fabric softener to the dispenser drawer to the left of the control panel.

2

Load the machine.

Place clothes loosely into the machine and close the door. Do not over pack the drum. Press the ON/OFF button to turn on the machine.

3

Select cycle and start the machine.

Turn the knob to the desired wash cycle. Once the desired cycle has been selected, the standard presets will be shown in the display. These settings can be adjusted using the cycle setting buttons anytime before starting the cycle.

If applicable, press the cycle option button(s) for the option(s) you would like to add:

Delay Wash

Delay the start of the cycle by one hour each time you press the button, up to 19 hours.

Pre-Wash

Adds a 12-minute pre-wash and an extra spin cycle to help with heavily soiled items.

Stain Cycle

Adds extra wash time and an additional rinse cycle.

Extra Rinse

Adds an extra rinse to ensure the removal of detergent or bleach residue from fabrics.

Water Plus

Adds extra water to the wash and rinse cycles, great for bulky items.

Tub Clean

Select this option to remove buildup inside the machine between loads (do not use with clothes). Before the cycle begins, add liquid bleach to the bleach compartment (do not use detergent or fabric softener). After the cycle has ended, open the door and allow the drum interior to dry completely.

Beeper

Select on or off for a sound when the cycle is complete.

Press the START/PAUSE button to start the machine.

Multi-Family Laundry Solutions Since 1956

Automatic
LEASING  SERVICE





LG Laundry System FAQs

1

Where is the lint trap?

There isn't one. 99% of the lint generated is simply flushed down the drain. The agitator in other machines abrades clothes, which causes lint and shortens garment life. This machine is designed to not create lint.

2

What does the code CD mean?

It means the load is finished. You can remove the items now or wait until they are cooled. The machine will continue to fluff them for up to 4 hours.

3

How do I dry only?

Turn on the machine, then set the dry cycle to the desired setting. Push the spin cycle selector to clear the spin speed and then push START.

4

How much is a regular load?

Fill the drum about $\frac{1}{2}$ full. Be sure to allow room for air circulation since you are loading the dryer at the same time.

5

Why do my clothes feel damp when I remove them from the dryer?

Ventless dryers dry from the inside out, therefore sometimes a bit of residual moisture remains on the outside of the fibers. Shaking the items should dissipate any moisture.

Laundry Tips & Best Practices

- Do not overload the machine. Items should move easily through the water during the wash cycle, and have room for air circulation during the dry cycle.
- For best results, mix large and small items in each load.
- Dry similar items together. For heavy items, like towels, add an extra spin or set the dry cycle to MORE.
- To reduce wrinkles, use liquid fabric softener, a medium spin speed, and a shorter timed dry setting. For shirts, remove after 20-25 minutes and hang up while still slightly damp at the collar. For jeans, remove after 60 minutes and fold over a hanger until completely dry.

Automatic

LEASING  SERVICE

CALL 800.558.2342

VISIT [automaticleasing.com](https://www.automaticleasing.com)